

HASTINGS INSTRUMENTS

HFM-300/301/305

HFC-302/303/307

QUICK START GUIDE

README FIRST!

3. Operation

- Insure flow connections are leak free.
- Insure electrical connections are correct.
- Apply power. Allow 5 minutes for the instrument to stabilize and note that the output signal decays toward zero.
- To zero the instrument, allow 30 minutes to one hour for warm-up time
- Pass 20% flow (~1VDC output) through the instrument for 5 minutes.
- Stop flow and insure that there is no leakage.
- Wait 2 minutes, then adjust the zero potentiometer.

1. Unpacking and Inspection



- Unpack and Inspect all items for any obvious signs of damage due to shipment. Immediately advise the carrier who delivered the shipment if any damage is suspected.
- Insure that all parts are present (e.g. flow meter, power supply, cable, etc.)
- Insure that instrument options are correct (e.g. output, range, gas, pin out, etc.)





Accredited by the Dutch
Council for Accreditation (RvA)

Accredited by the Registrar
Accreditation Board (RAB)

TELEDYNE
HASTINGS INSTRUMENTS

2. Cable Connections

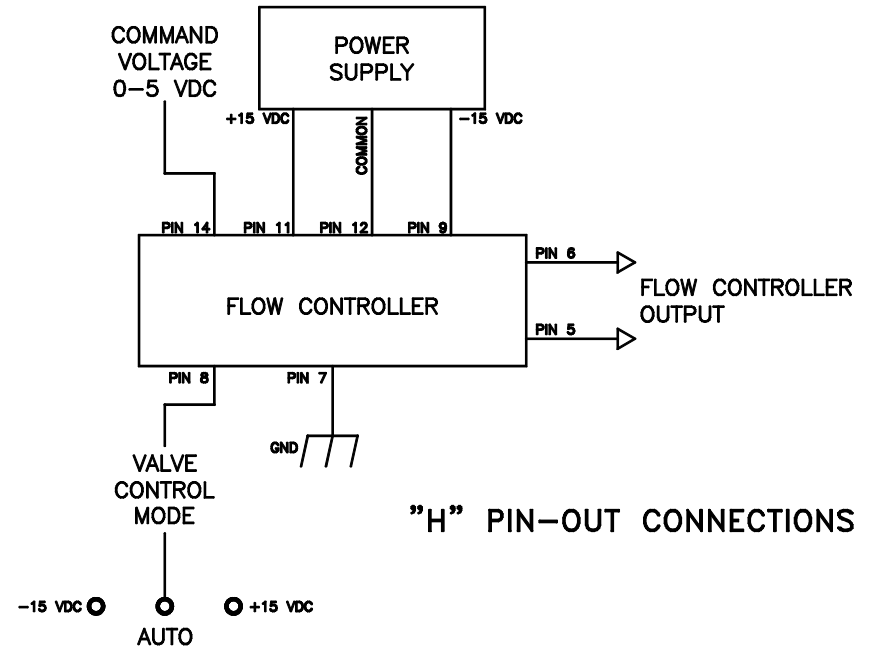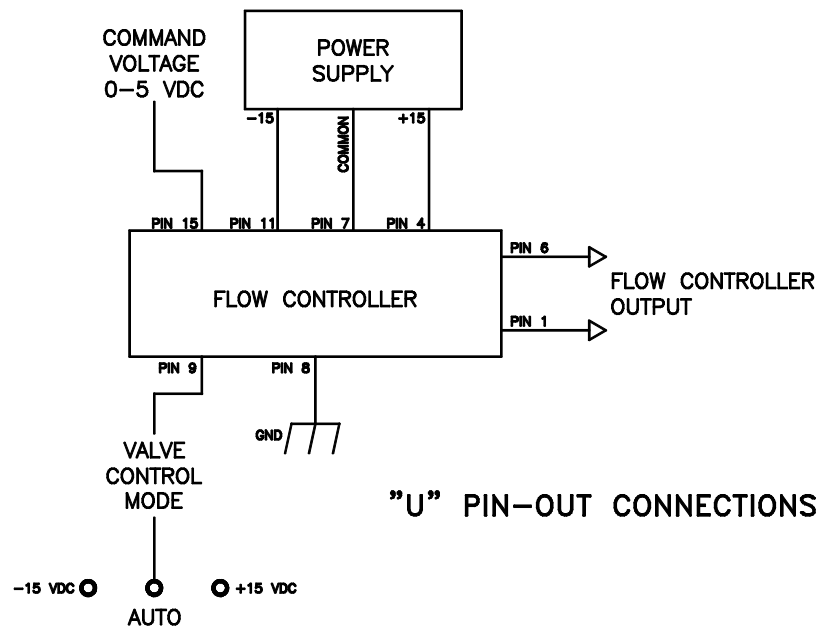

Pin #	
1	Signal Common
2	Do not use
3	Do not use
4	+15 VDC
5	
6	Output 0-5 VDC (4-20mA)
7	Signal Common
8	Case Ground
9	Valve Override
10	
11	-15 VDC
12	External Input
13	Signal Common
14	Signal Common
15	Set Point 0-5 VDC (4-20mA)

Pin #	
1	Do not use
2	Do not use
3	Do not use
4	Do not use
5	Signal Common
6	Output 0-5 VDC (4-20mA)
7	Case Ground
8	Valve Override
9	-15 VDC
10	Do not use
11	+15 VDC
12	Signal Common
13	External Input
14	Set Point 0-5 VDC (4-20mA)
15	Do not use

- If not using Hastings power supply and cable, use a regulated supply capable of +/- 15VDC @ 150mA for a flow controller or +/- 15VDC @ 55mA for a flowmeter.

- If not using Hastings power supply and cable, use a regulated supply capable of +/- 15VDC @ 150mA for a flow controller or +/- 15VDC @ 55mA for a flowmeter.